

920066PL USER MANUAL

Thermal actuators are mainly used in floor heating systems to control closing and opening of the valves. It is specifically applied to electric drive part of the branch manifold valve, small valve and dynamic balance valve. No noise, fast installation and easy disassembly.



Feature:


Compact size, small dimensions	Fast installation and disassembly
Noiseless	Various adapters
Low power consumption	Full view stroke indication

Techinical parameters:

rechinical parameters:	
Control direction: Normally closed/Normally open	Adapter: M30x1.5mm/M28x1.5mm
Voltage: 230V/24V/12V version	Cable length: 800MM
Protection Grade: IP54	Standard: EN 60730
Working temperature: -5 °C -60 °C	Force:100±10N
Stroke: ≥4mm	Closing and opening time: 3-5mins
Housing material: PA66+30%GF	Power consumption: 2W

Dimensions:


Unit: MM

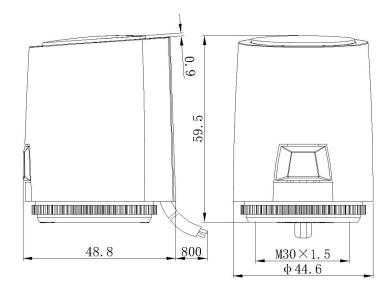

www.smlghvac.com

Installation and disassembly:

Installation:

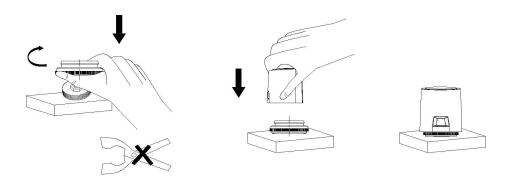



Step 1 Rotate the nut clockwise and install it on the valve (Note:Do not use pipe pliers)

Step 2 Press down on the actuator against the adapter

Step 3 Finish installation

Disassembly:

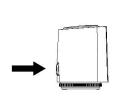

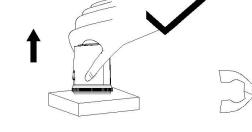


Step 1 Press the button with your hand


Step 2 Press and hold the button and lift up to remove the actuator

Step 3 Do not use pipe pliers, clamp and other tools


Installation and debugging precautions:


Indication cover status confirmation

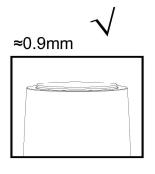

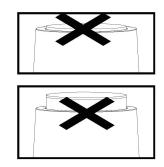

Working situation

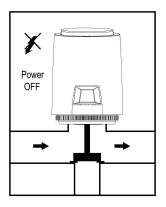

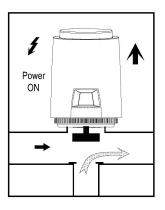

Normal situation

Abnormal situation

N/C normally closed